



Reactive Target System LTD.



Reactive Target

USER MANUAL



www.fab-defense.com

43, Yakov Olamy St. Mishmar Hashiva, ISRAEL 50297

Tel: +972 3 960 3399 | Fax: +972 3 960 3312



Reactive Target

Reactive Target System LTD.

USER MANUAL

Parts List (Fig 1)

1. Target Base
2. Rectangular Pole
3. Self-Healing Torso Target
4. Smart Joint

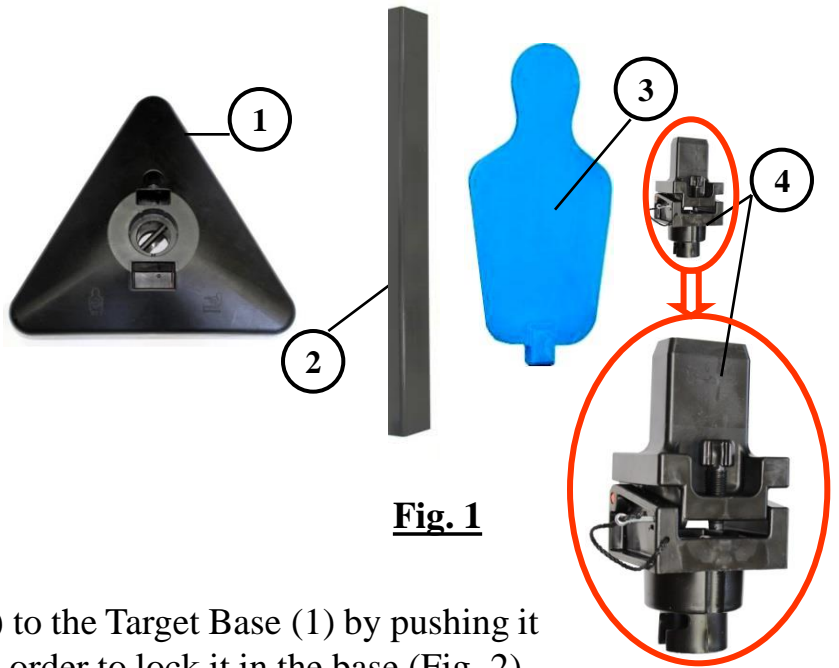


Fig. 1

Step 1. Attach the Smart Joint (4) to the Target Base (1) by pushing it down and turning it clockwise in order to lock it in the base (Fig. 2).

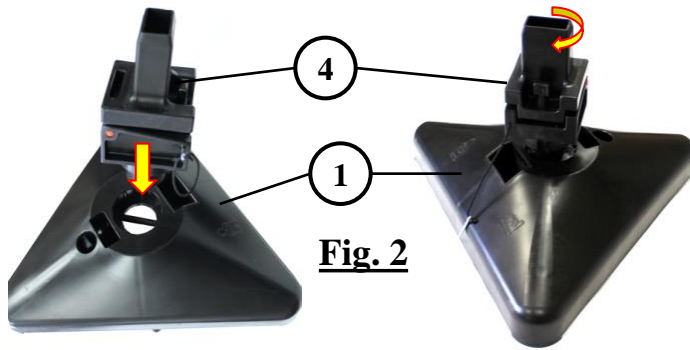


Fig. 2

Step 2. Insert the Rectangular Pole (2) into the Smart Joint (4) and place the Torso Target (3) on the Rectangular Pole (2) as shown in Fig. 3.


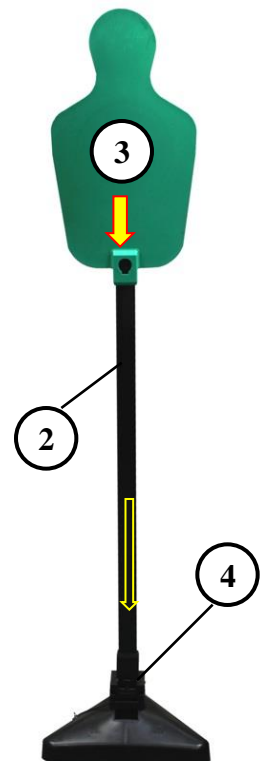


Fig. 3

REACTIV TARGET Operation Modes

Falling Target

- 1) Make sure that the Locking Pin (a) is extracted from the Smart Joint (4).
- 2) Turning the Adjusting Bolt (b) set the Falling Mode (Fig. 4).
The adjustment is completed when the target falls as a result of a gentle push of the Self-Healing Torso Target (3).

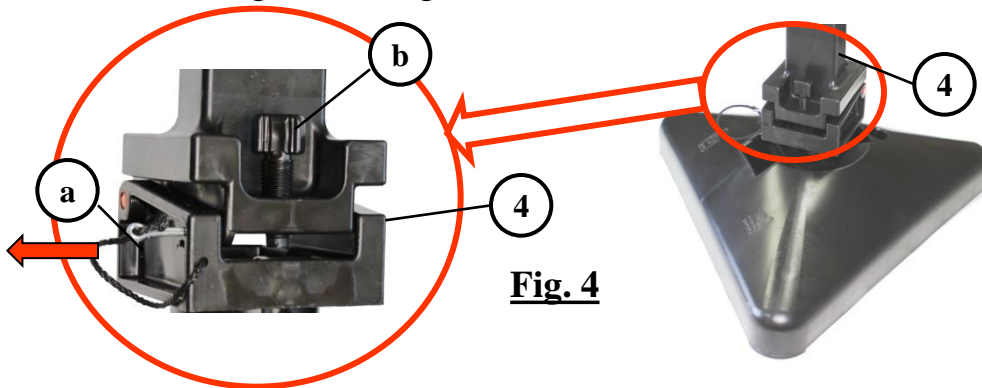

Static Target

Insert the Locking Pin (a) into the Smart Joint (4) as shown in Fig. 5.
Check that the Target is stable.

