

RANGE SYSTEMS™

Model: Pro-Tab Control System Quick Start Guide

5121 Winnetka Avenue
New Hope, MN 55428

Tech Support:
Toll Free: 888.999.1217
Main Office: 763.533.9200
service@range-systems.com



Copyright 2026 Range Systems

All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means without permission in writing from the publisher.

Part Number: YD5027 Revision 1.1 1/1/26

TABLE OF CONTENTS

QUICK START GUIDE PAGE 3

**FOR MORE INFORMATION PLEASE VIEW OUR APP INSTALL VIDEO AT
[HTTPS://WWW.RANGE-SYSTEMS.COM/ANDROID-SOFTWARE/](https://www.range-systems.com/android-software/)**

TO PURCHASE REPLACEMENT PARTS OR ACCESSORIES PLEASE EMAIL:
SALES@RANGE-SYSTEMS


Quick Start Guide

In the Kit:

- PTX-600 transmitter
- Tablet
- Antenna
- Charger (usable by both tablet and transmitter)

TRANSMITTER SETUP

1. Establish a Bluetooth connection between the transmitter and tablet.
 - a. On the transmitter, connect the antenna to the co-axial port.
 - b. Flip the switch to the ON position. The green light on top of the transmitter will begin blinking rapidly.
 - c. On the tablet, make sure Bluetooth is turned on. Navigate to Settings >> Connections >> Bluetooth. A scan for devices should begin automatically. Select “ATS_PTX” from the list of available devices.

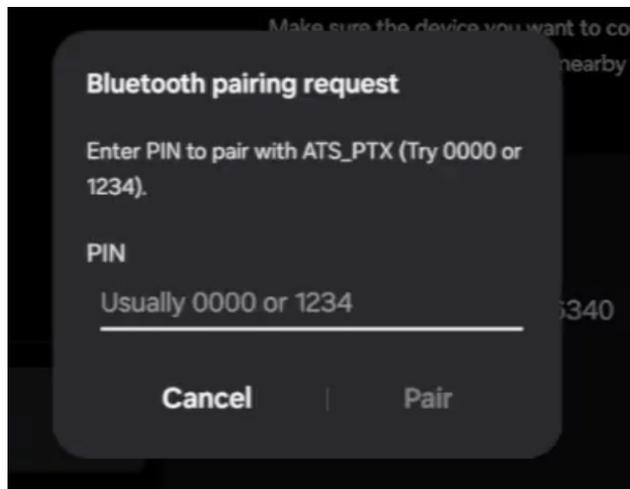


- d. Enter the PIN code “1234” when prompted, then tap “OK.”

TIP: It may take more than one scan for “ATS_PTX” to appear in the list of available devices. If “ATS_PTX” does not appear in the list after the first scan, tap “Scan” on the top right until the device is recognized.

- e. You have successfully paired the two devices once the green light on top of the transmitter blinks slowly.

2. Install the PTX-BT app.


- a. Download the Application from <https://www.range-systems.com/android-software/>
- b. If you do not have an access password please reach out to your sales agent.
- c. Rename file to PTX600BT136_202.apk
- d. Open the Apk file and press install when prompted

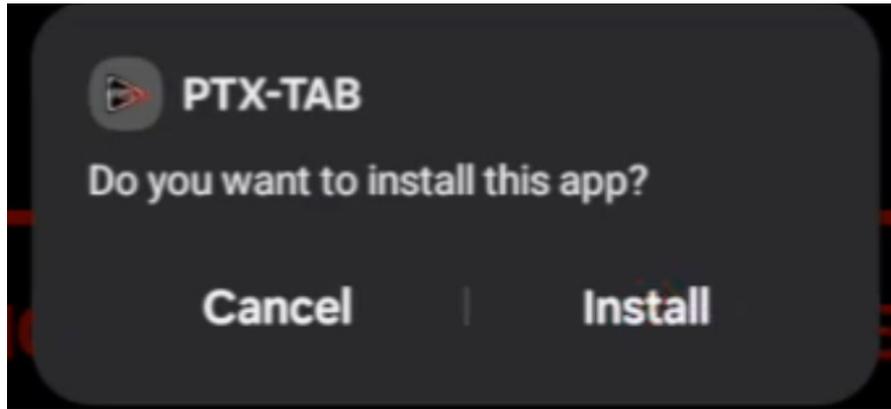

TIP: On attempting to open the file in step 1e, you may receive this error:


This is a permissions issue common on new tablets. Tap “Settings” and turn the switch “Allow from this source” to the position. Exit “Settings,” open “Drive,” and proceed with app installation from step 2e.

- e. Tap “Install,” then “Open.”
- f. Tap “Allow” if prompted.
- g. After opening software a popup will ask for permissions for photos, must click allow
- e. open settings and click apps and allow access to all options

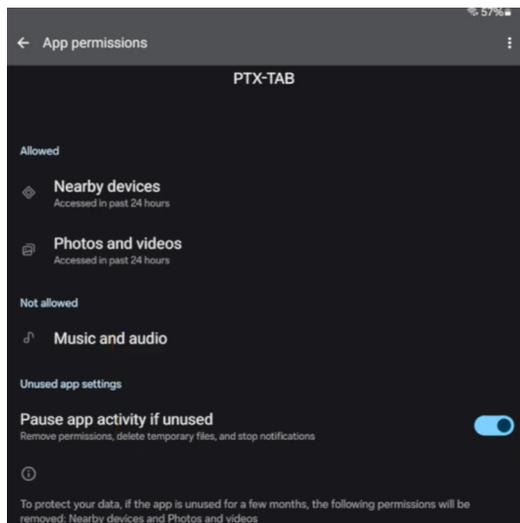


TIP: The app’s icon will not be added to the tablet’s home screen by default. For faster access, add the icon to your home screen by tapping and holding on the icon from your app drawer.

4. Turn off WIFI

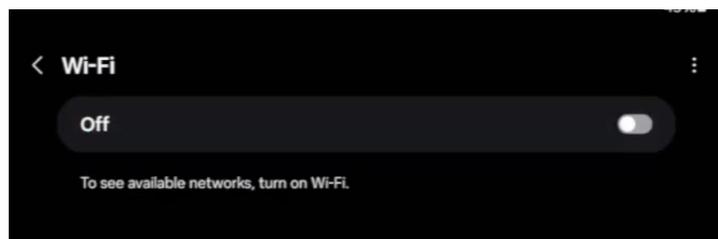

5. Set the app to control your PTX-600 transmitter.

a. In the app, tap “PTX CLASSIC” to connect to the transmitter.

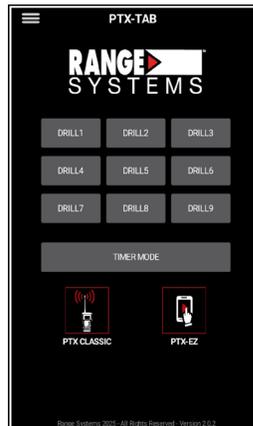

b. You will see a green check mark when connected.



4. Control your connected targets as desired.



5. When finished, tap “DISCONNECT” in the app and flip the transmitter switch to the OFF position.