# RANGE SYSTEMS™

## Pro-Touch Base to Plus WIFI
## Programing Manual

5121 Winnetka Avenue
New Hope, MN 55428

Tech Support:
Toll Free: 888.999.1217
Main Office: 763.533.9200
service@range-systems.com




Copyright 2026 Range Systems
All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means without permission in writing from the publisher.


Part Number: YD5038 Revision 1.1 1/1/26


## Pro-Touch® Upgrade WIFI Setup (Base to Plus Model Only)

Note: This section only applies when performing an upgrade from a Pro-Touch® Base model to a Pro-Touch® Plus model. These steps should be taken only after the physical WiFi system and its components have been installed and powered up.

### Access Android Settings

Press the Power and Home buttons on the back of the local lane controller at the same time.
A setup screen will appear. Tap the screen.
When prompted for a password, enter:
1911
When the blank screen appears, press the hamburger menu.
Select Admin.
Enter the password: 1elo
Press Settings.
Select Android Settings.

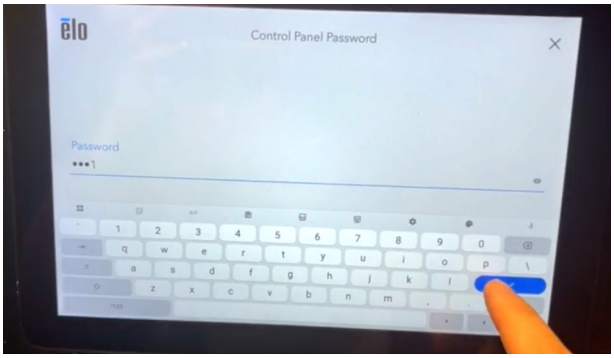

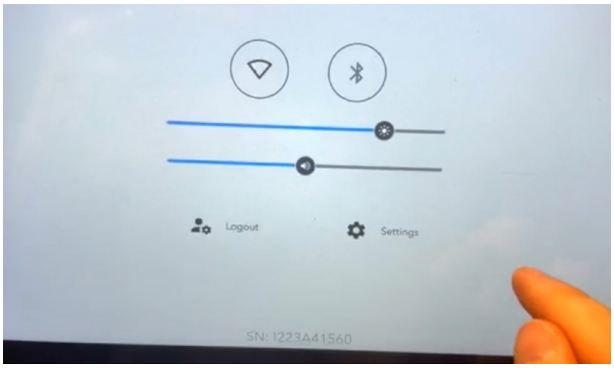




### Connect to the Range Systems Network

Navigate to the Network section which ius located in the Android Settings section.
Connect to the rangesystems wireless network (all lowercase).
Enter the network password: 8332448925

### Configure the Static IP Address for the local lane controller

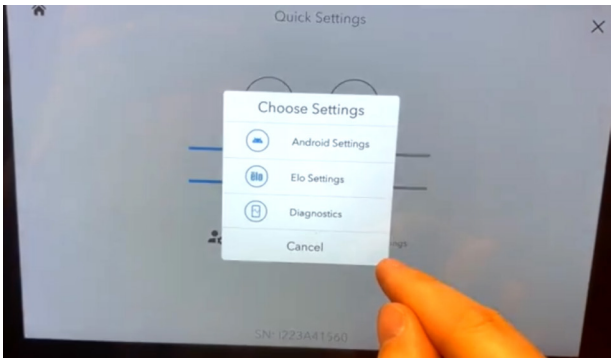Press the pencil icon in the upper-right corner.
Under IP Settings, select Static.
Enter the appropriate IP address based on the lane number:




| Lane Number | IP Address |
|---|---|
| Lane 1 | 192.168.1.111 |
| Lane 2 | 192.168.1.112 |
| Lane 3 | 192.168.1.113 |
| Lane 4 | 192.168.1.114 |
| Lane 5 | 192.168.1.115 |

Etc. Continue sequence based on lane number

Note: The final number in the IP address corresponds to the lane number.

**Model Configuration**

When upgrading from a Base model to a Plus model, the installer must also update the model information within the system menu.

**Please contact Range Systems Technical Support for assistance with this step.**

**Troubleshooting:**

If the device is not showing online or cameras are not visible:

**Refreshing the System**

1. Return to the local Pro-Touch® app Home Screen.
2. Press the Range Systems logo.

This will refresh the system and reconnect the device.

**For questions, troubleshooting assistance, or commissioning support, please contact Range Systems Technical Support.**